

circular sudoku

OPERATING INSTRUCTIONS

BATTERY INSTALLATION (batteries included)

- Unscrew the battery cover with a Phillips screwdriver.
- Insert 2 "AAA" batteries with the positive (+) and negative (-) ends facing in the proper direction as indicated in the battery compartment. (see Fig. 1)
- Replace the cover.

SAFETY BATTERY USAGE

- Different types of batteries or new and used batteries are not to be mixed.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose the batteries in fire, batteries may leak or explode.
- Batteries should be replaced by an adult.
- Please keep details for future reference.
- Alkaline batteries are recommended.

CAUTION

- Adults should replace batteries.
- Not suitable for children under 3.
- May contain small parts.
- Do not dispose of batteries in fire; batteries may explode or leak.
- This product contains glass, which may cause injury if broken.

CARING FOR YOUR DEVICE

- If the display becomes dim or malfunctions, replace the batteries.
- After replacing batteries, switch to BEG or ADV to ensure proper functioning.
(In most cases, game malfunctions are due to weak batteries.)
- In an environment with electrostatic discharge, the product may malfunction and lose memory. In this case switch OFF and then turn to BEG or ADV.
- If the product malfunctions after switching to BEG or ADV, use the tip of the stylus to activate the pinhole RESET button located on the back of the product to reset the game or simply switch to OFF and back to BEG or ADV.

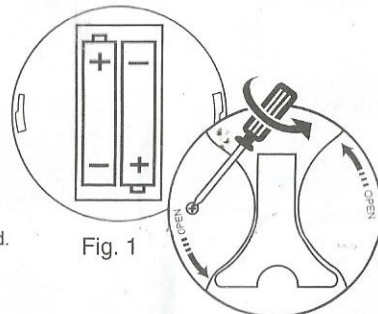


Fig. 1

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

GAME PLAY


OBJECT:

USING LOGIC, FILL IN THE NUMBERS 0-9 SO THAT EVERY 2 ADJACENT SLICES AND EACH RING CONTAIN EACH NUMBER ONLY ONCE.

1. To begin slide the switch from the **OFF** position and choose either **BEGINNER** or **ADVANCED** mode.
2. Using the stylus, select **Level 1, 2, 3 or 4** by touching the numbers **1, 2, 3 or 4** on the bottom left side of the screen. 1 is the easiest and 4 is the most difficult.
3. Once the selection has been made, a puzzle will appear on the screen. The amount of fixed numbers appearing on the grid is determined by the level selected. Fixed numbers are marked with a black dot next to the number. The higher the level the less fixed numbers that appear.

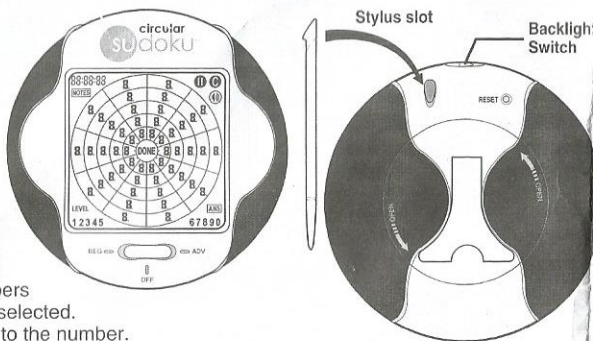

4. Using the stylus fill in the grid by first touching the number at the bottom of the screen to be selected and then touching the box within the grid to place it. Please note that in the **BEGINNER** mode any number that has been placed in an incorrect box will continue to flash to let you know that it is in the wrong place.
5. To **CLEAR** an entry, touch the **C** at the top of the screen and then the touch the box on the grid to be cleared. A new number can now be entered in that box using the same steps as above. You can also directly place a new number in a filled box without clearing the previous number by touching a new number and then touching the box.
6. Once each of the numbers 0 through 9 has been placed correctly, the number will disappear from the bottom of the screen. If the numbers have all been placed correctly, a sound effect will be heard. If no sound effect is heard then one or more numbers have been placed incorrectly.
7. The time clock at the top of the screen keeps track of the time it takes to complete the puzzle.
8. Pause the game by touching the **PAUSE** icon **II** located on the upper right of the screen. To continue playing touch the **PAUSE** icon again.
9. After 4 minutes without play, the game will turn off automatically. Touch the screen anywhere and hold for 2-5 seconds with the stylus to resume the game. Please note that when the game resumes it will be in the **PAUSE** mode. Touch the **PAUSE** icon to continue playing.
10. The screen contrast can be adjusted by first touching the **PAUSE** icon at the top of the screen. The numbers 1 through 9 will appear on the bottom of the screen. 1 is the lightest and 9 is the darkest. Touch the number to set the desired contrast.
11. Turn the sound on and off by touching the **SOUND** icon **🔊** located on the upper right of the screen.
12. At anytime during the game, the answer to a box can be viewed by touching the **ANSWER** icon (**ANS**) on the bottom right of the screen, then touching the box you want to show the answer. This feature can only be used 5 times in the **BEGINNER** mode and 3 times in the **ADVANCED** mode during the course of the puzzle.
13. When the player completes the puzzle, **DONE** will be displayed on the screen. Touch the screen anywhere with the stylus to return to the main menu.
14. **RESET** the game by activating the pinhole **RESET** button located on the back of the product.

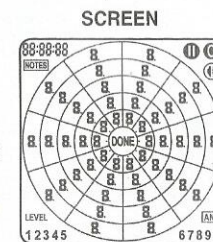

ILLUMINATION FEATURE: Now you can play Circular Sudoku anytime! To turn on the light and illuminate the screen, slide the switch on the top of the unit to the right (**ON** position). To turn off the backlight, slide the switch on the top of the unit to the left (**OFF** position).

NOTE: This feature will automatically turn off if the unit enters sleep mode. When the player touches the screen anywhere with the stylus, the unit will exit sleep mode and the light will automatically turn back on if the switch is still in the **ON** position.

- If the player turns the unit **OFF**, the backlight will not turn on regardless of whether the backlight switch is in the **ON** position.

CIRCULAR SUDOKU NOTES FEATURE

1. Players can now place multiple numbers in the same box as "placeholders" until ultimately deciding which number should remain in the box through logical elimination.
2. To activate the **NOTES** feature, touch the word **NOTES** on the upper left of the screen. Touch the number at the bottom of the screen you wish to select and then touch the box within the grid to place it. The black dot next to the number will flash to symbolize that this is now an activated **NOTES** box.

NOTE: You must touch the word **NOTES** each time you select a **NOTES** number to be entered.

3. To add another number to the box, touch the word **NOTES** with the stylus again, then one of the numbers at the bottom of the screen and add it to the box. The player can add as many **NOTES** numbers to the same box as they like. To show all the placeholder numbers within each box, each **NOTES** number remains onscreen for 2 seconds and then changes to the next **NOTES** number. For example, if a 7 and a 4 are placed in the box, the 7 would remain onscreen for 2 seconds and then would become a 4. The 4 remains onscreen for 2 seconds and then changes back into a 7. This cycle continues until the numbers are finalized.
4. To finalize the number, select the number from the bottom of the screen and touch the box again. If correct, the number is accepted, the black dot next to the number disappears, and the other **NOTES** numbers disappear. If incorrect, the finalized number will flash in Beginner mode.



© 2006 Techno Source.
All Rights Reserved.
30 Canton Road, Kowloon, Hong Kong
MADE IN CHINA
IM-20730

Product specifications and colors may vary.

Questions? Comments?
Visit our website at:
www.technosourceusa.com

